

## KEE Printhead Display



## KGE Printhead Display



## KKE Printhead Display



## Printer Label Display

The Printhead type is also located on the Printer label. (**Note:** On KEE Printers, Fargo does not put KEE on the inspection label on the back of Printers. It is only found on the Printhead itself.)

